



Mobile App User Guide

Copyright	© 2017 UTC Fire & Security Australia Pty Ltd. All rights reserved.
Trademarks and patents	<p>The Challenger name and logo are trademarks of UTC Fire & Security Australia Pty Ltd.</p> <p>Other trade names used in this document may be trademarks or registered trademarks of the manufacturers or vendors of the respective products.</p>
Manufacturer	<p>UTC Fire & Security Australia Pty Ltd trading as Interlogix is a part of UTC Climate, Controls & Security, a unit of United Technologies Corporation.</p> <p>Ground Floor, 10 Ferntree Place, Notting Hill, VIC, 3168, Australia</p>
Contact information	<p>10 Ferntree Place Notting Hill, Victoria 3168 Australia</p> <p>T +61 3 9239-1200 E support@interlogix.com.au W www.interlogix.com.au</p>


This user guide is intended for use after a panel has already been configured and successfully connected to the mobile app.

Contents

1. How to add a user:	4
2. How to check Alarms.....	9
3. How to Arm / Disarm an Area.....	11


1. How to add a user:

On the main screen, select 'User' tile at the bottom of the screen.

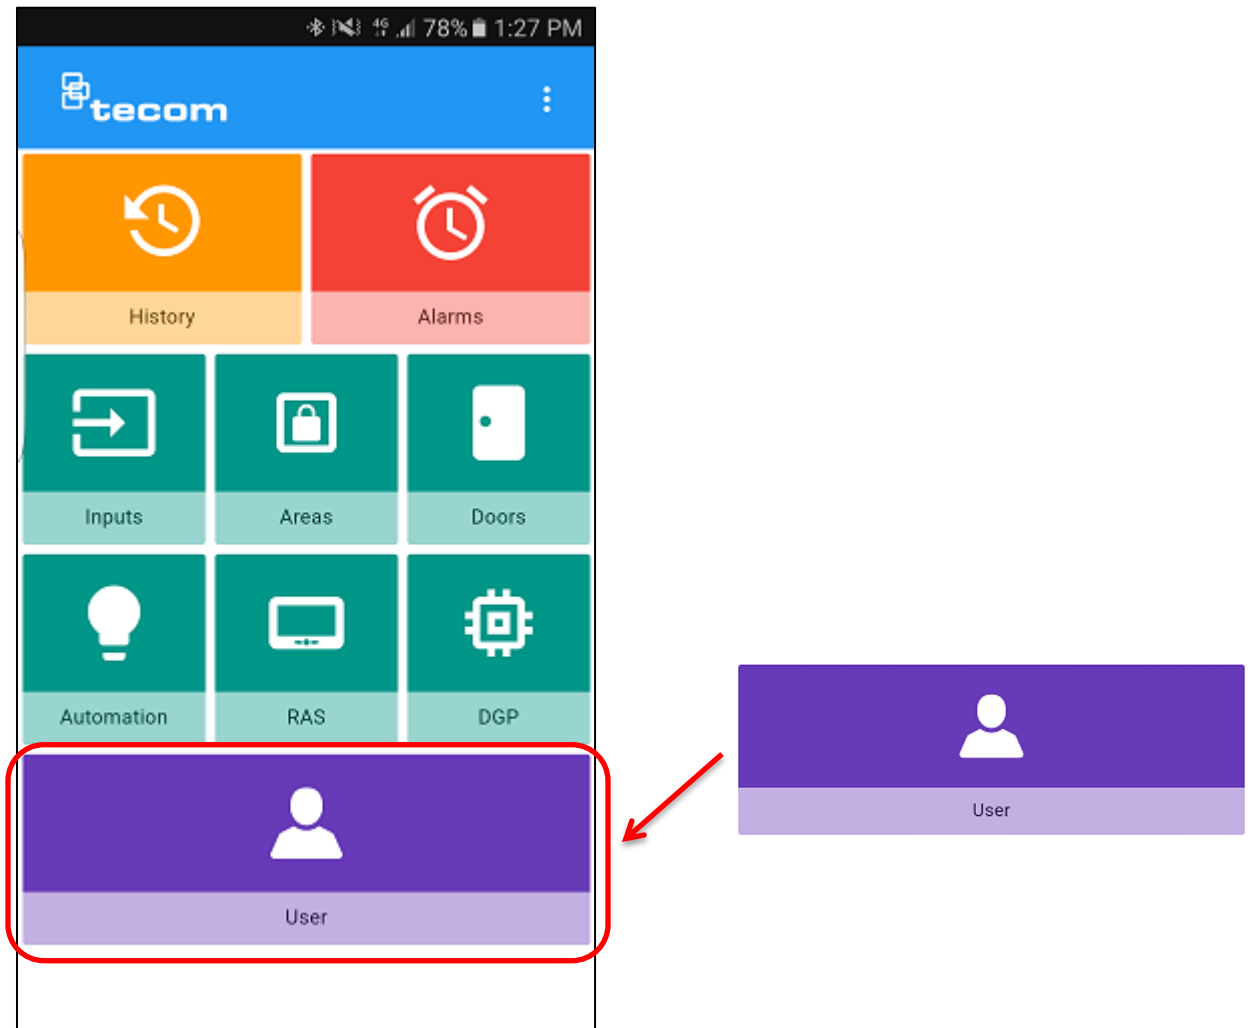

A list of users will appear.

Select the '+' button in the bottom right to add a user.

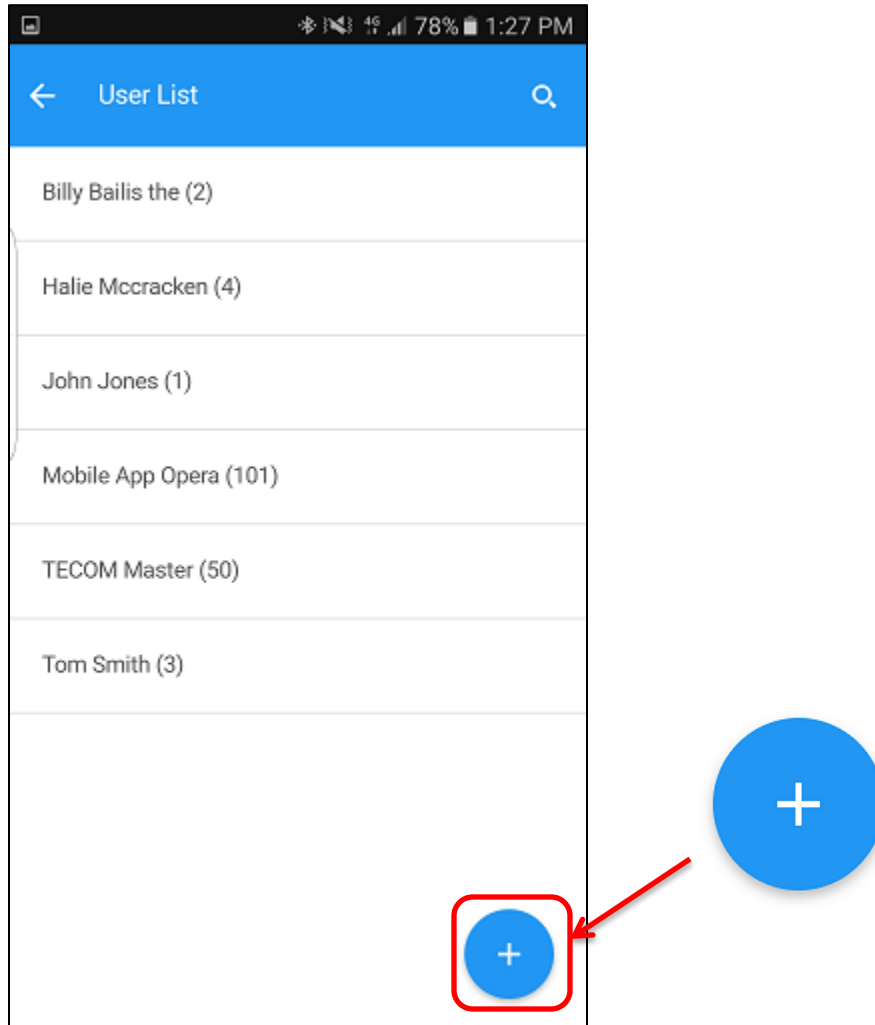


Complete the 'User Info' screen with the following fields:

- User name
- User PIN

Select an appropriate Alarm Group, Door Group, and Floor Group.


The User number will be automatically populated with the next available number. Note this can be modified if required.

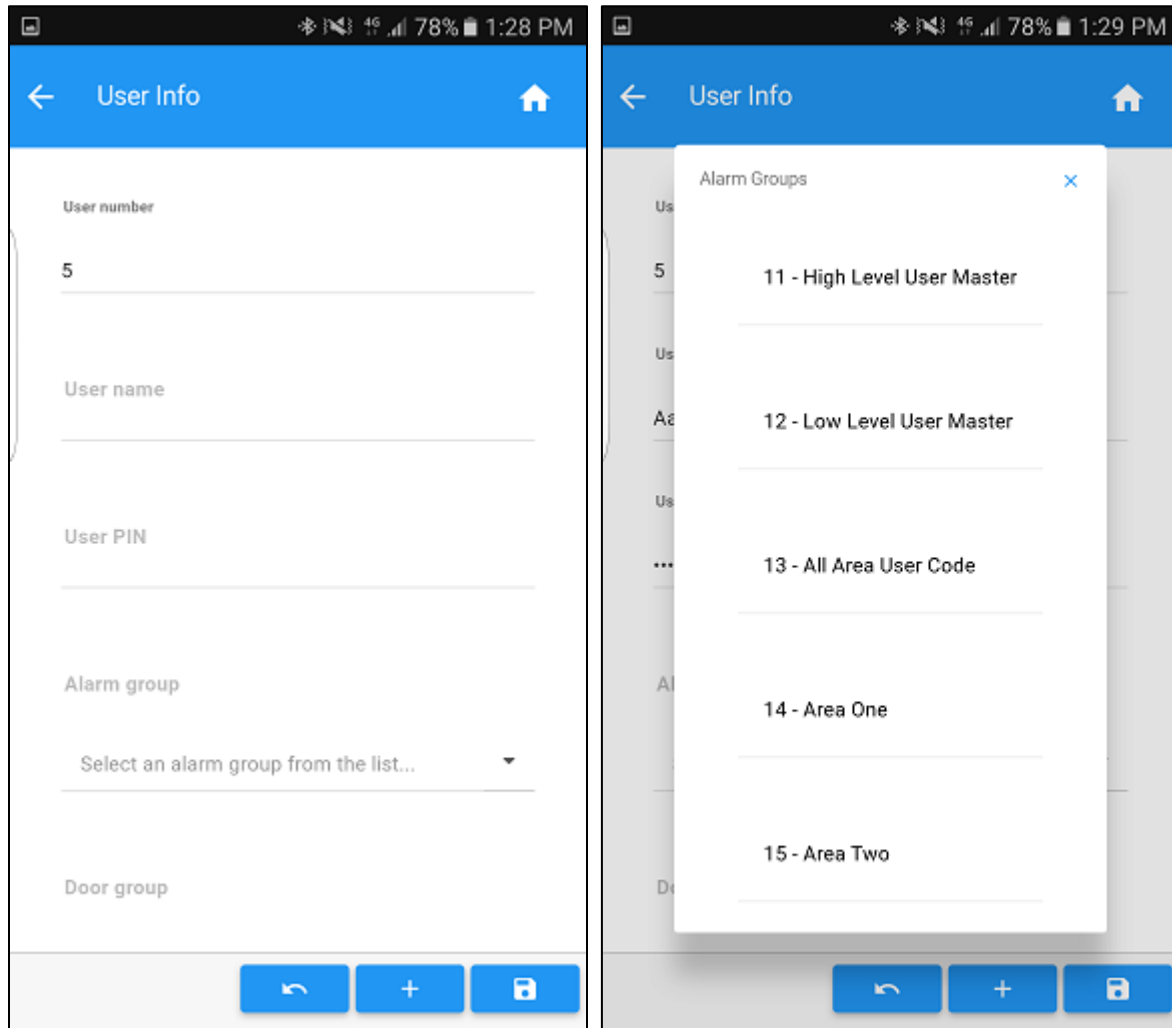

If card details are also required, complete 'Card details' section with the following information:

- Card format
- Site code
- Card ID


Select 'Generate Card Data' button.

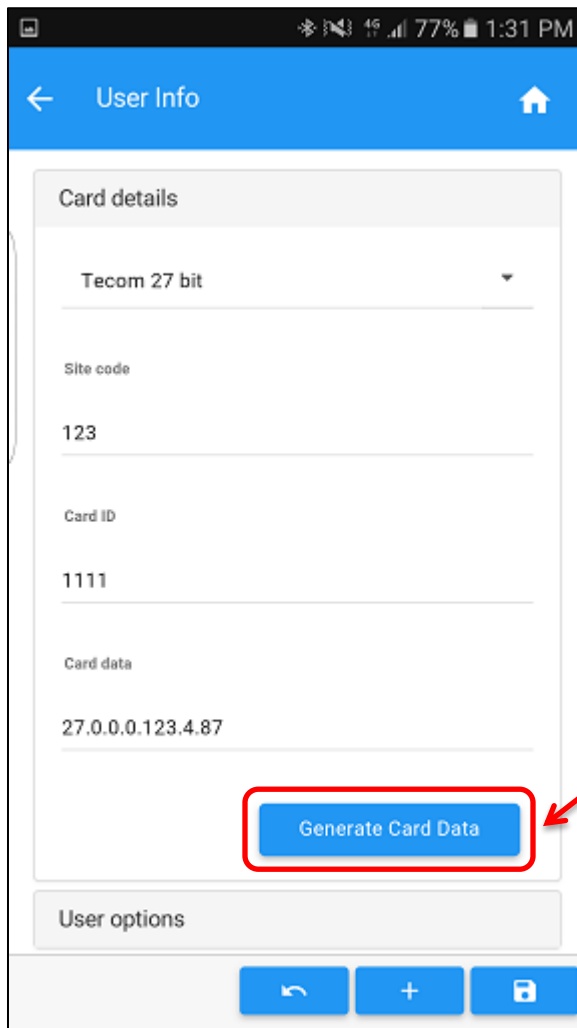

Generate Card Data


Once all details have been entered, select 'save' button in the bottom right corner.

The user will be saved directly into the panel and an updated user list will be displayed.

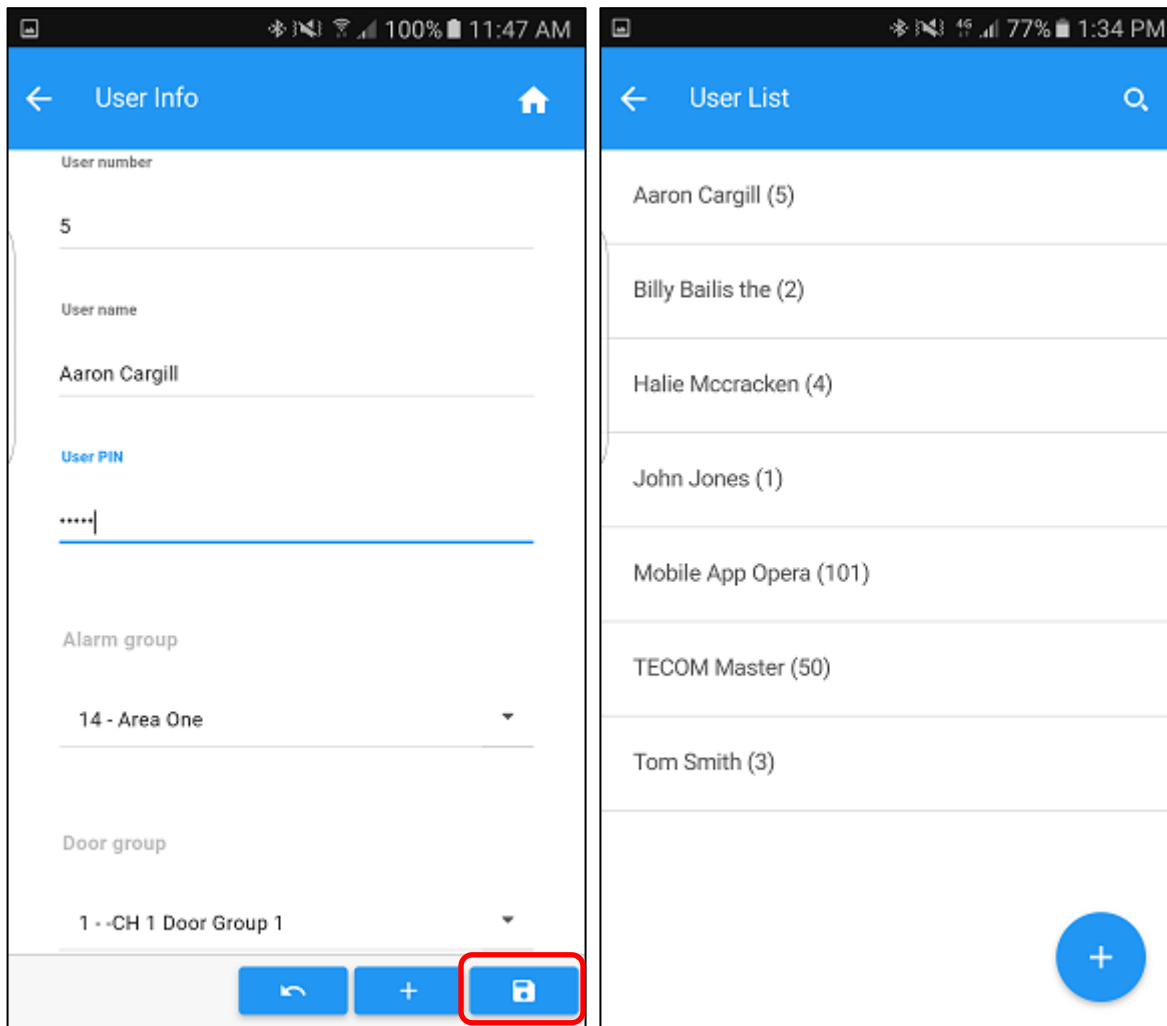

2. How to check Alarms


On the home screen, select 'Alarms'.

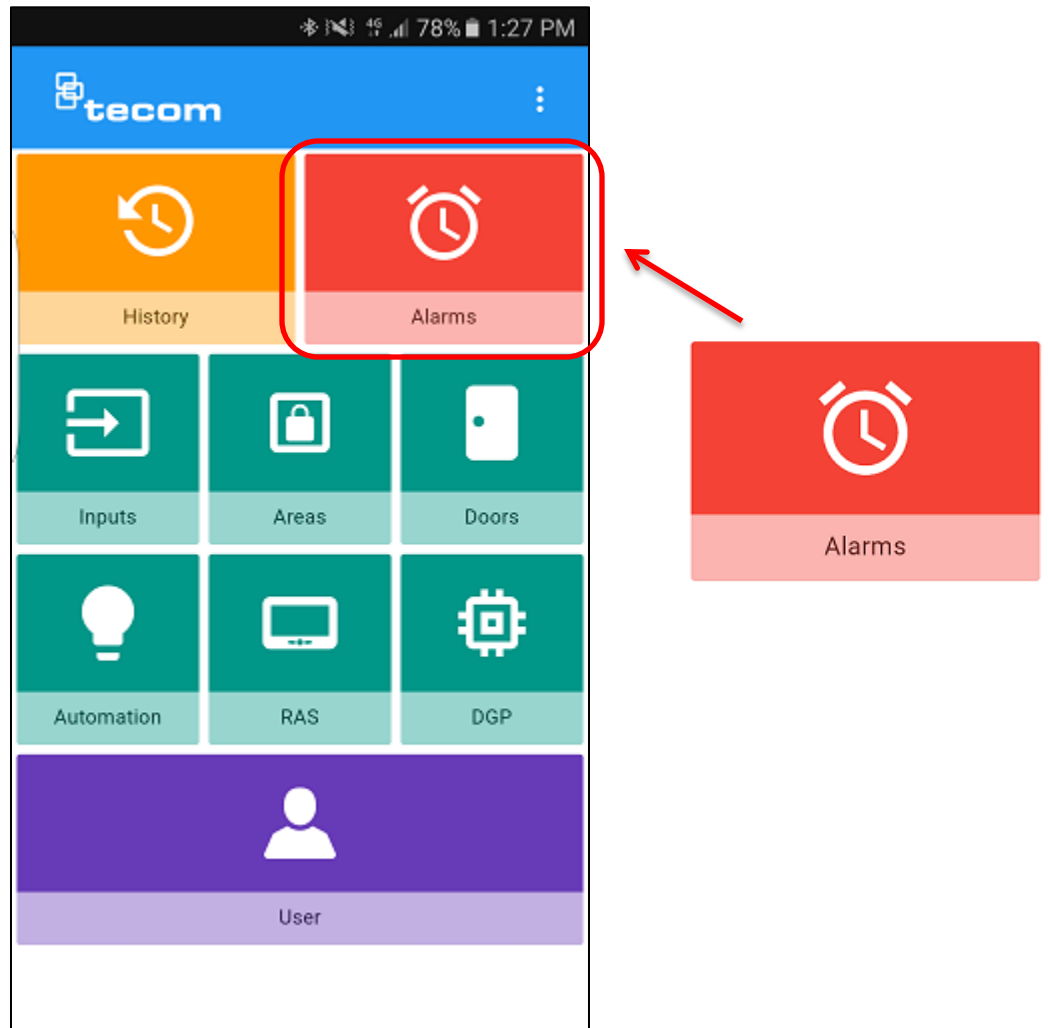

This will bring up a list of alarms on the panel that have not yet been reset.


Select 'Reset Alarms' button in the bottom right to clear any alarms that are no longer active.

Alarms that are still active will stay in the list.

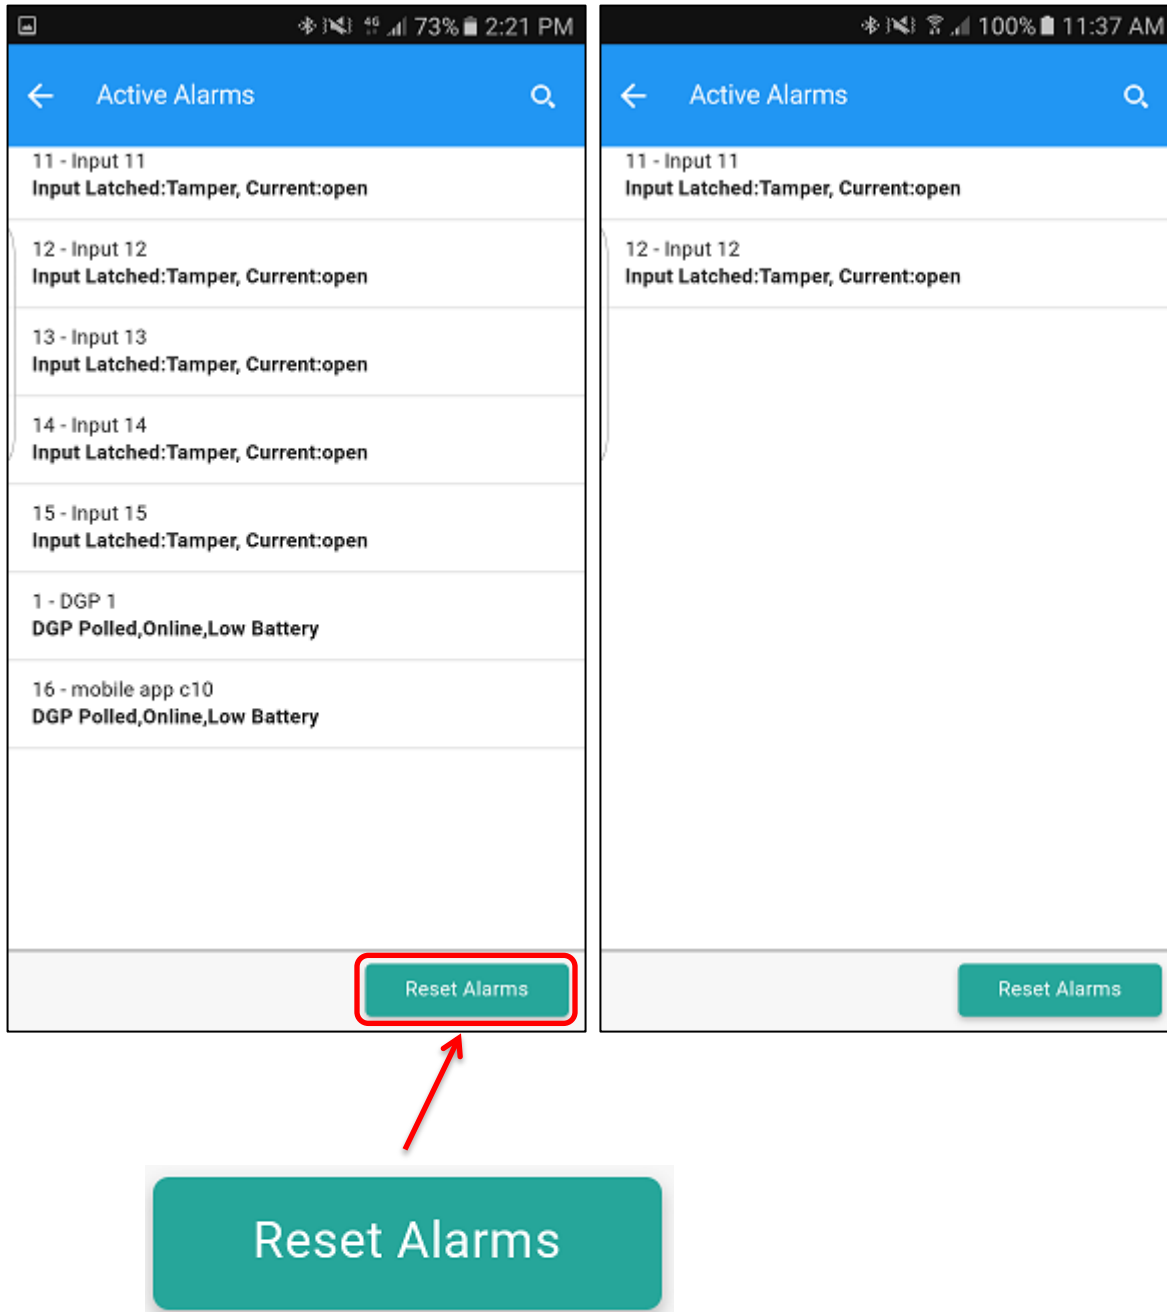


3. How to Arm / Disarm an Area

On the home screen select 'Areas' tile.

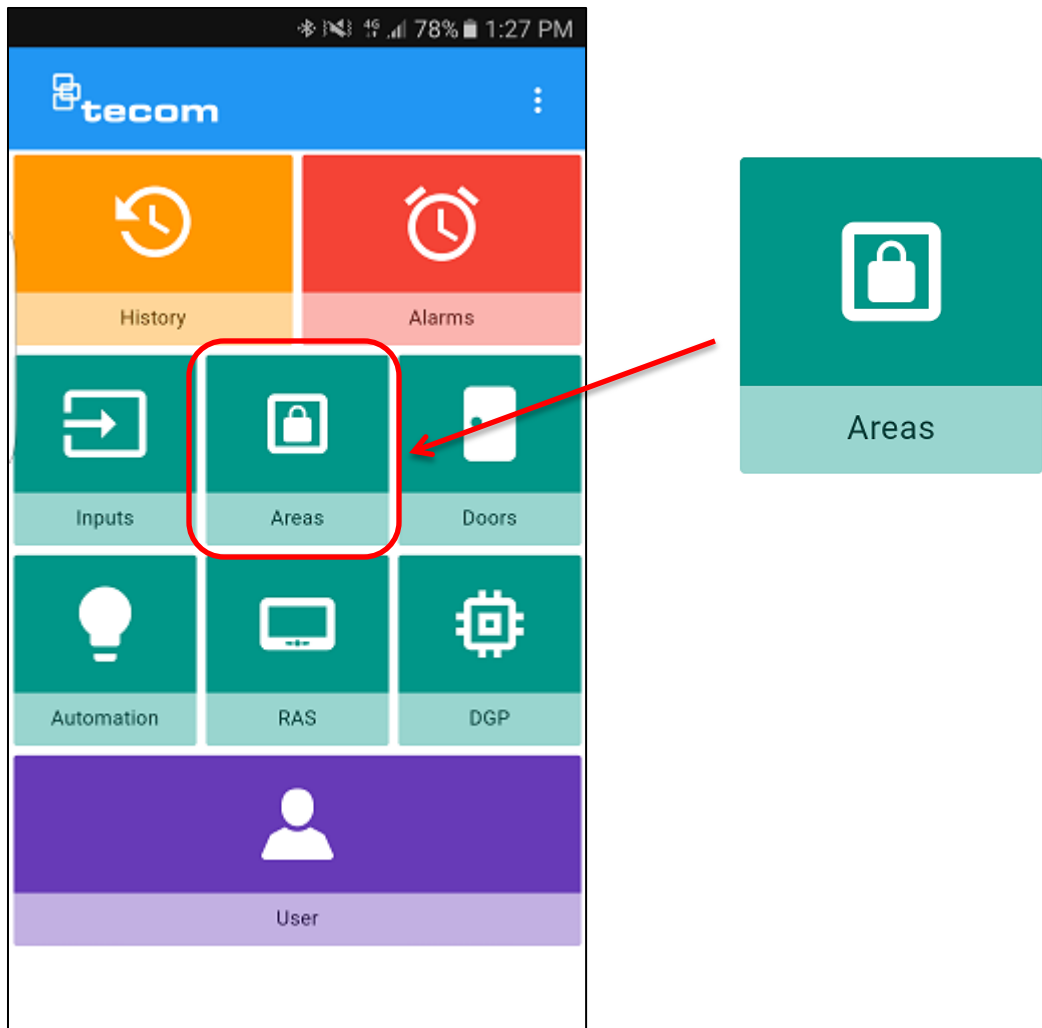


This will bring up a list of Areas on the panel, and display their state as 'Armed' or 'Disarmed' with a corresponding icon.

To arm or disarm an area, tap on the selection box next to an area, tap on the action you would like to perform, and then tap on the 'Go' button. This will immediately change state and update the status. The selection box will be preset to perform the action opposite to the current status by default on each area, so that you can quickly arm or disarm an area simply by pressing the 'Go' button.


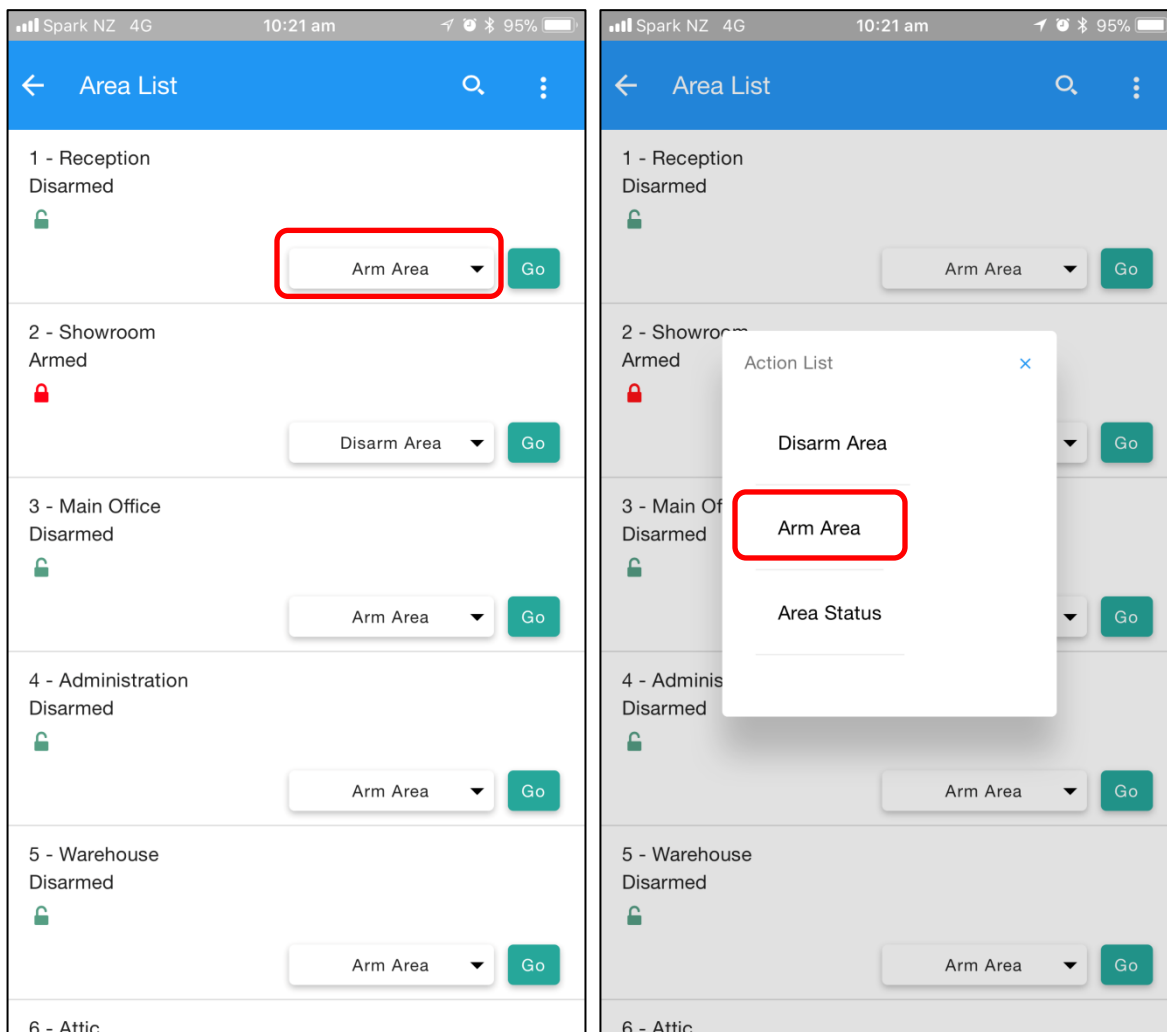


If you would like to quickly change the status of multiple areas, select the '...' icon in the top right, and select 'Multiple'.

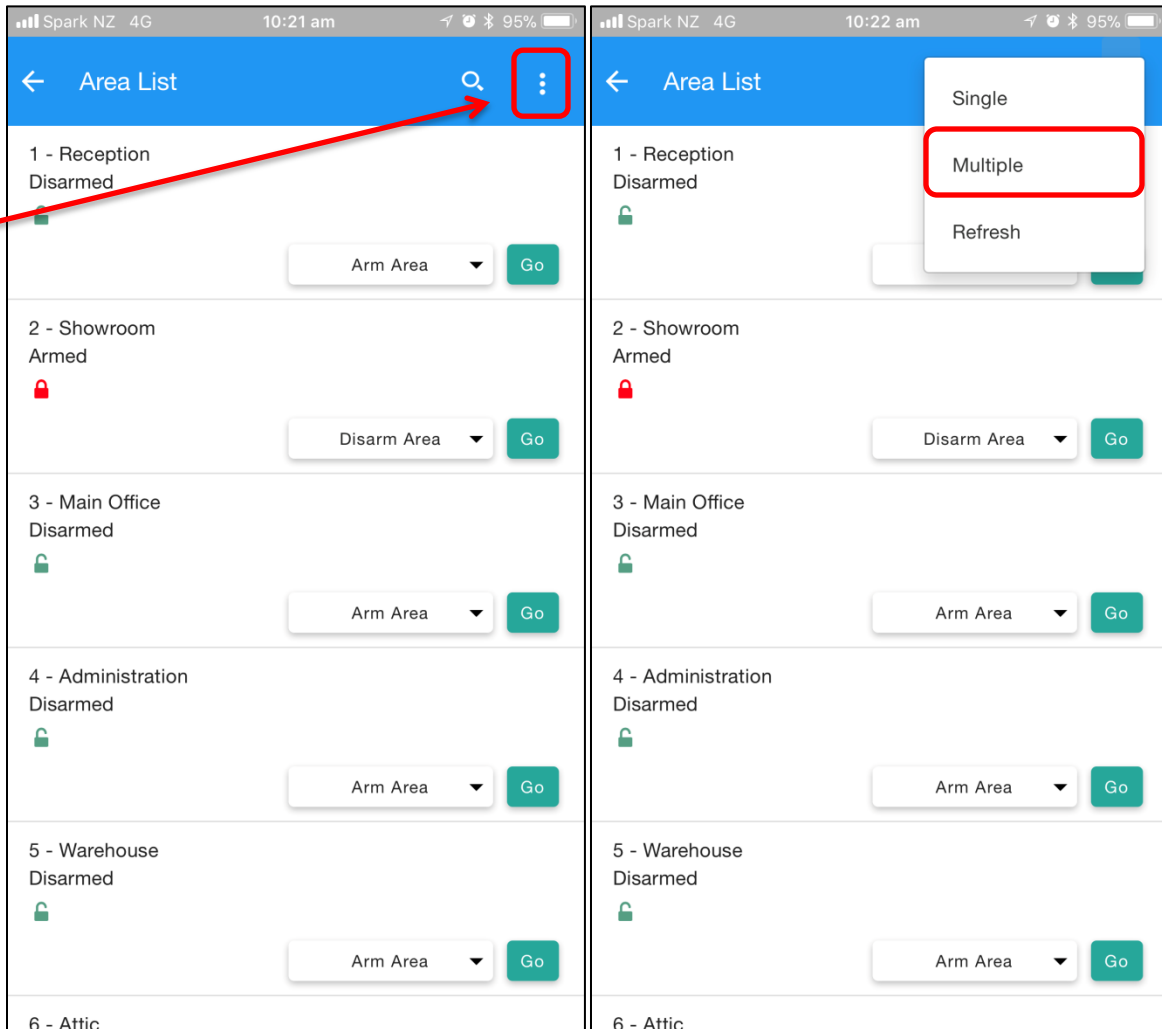

You can then select multiple areas using the checkboxes to the right of each Area.

When you've selected the Areas you want to change, tap on the selection box down the bottom and select 'Disarm Area' to disarm, 'Arm Area' to arm, or 'Area Status' to update the Area status information.

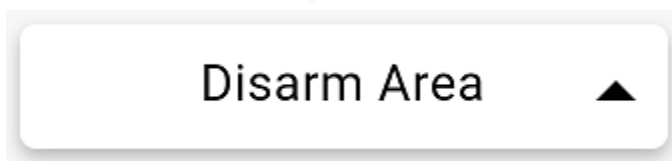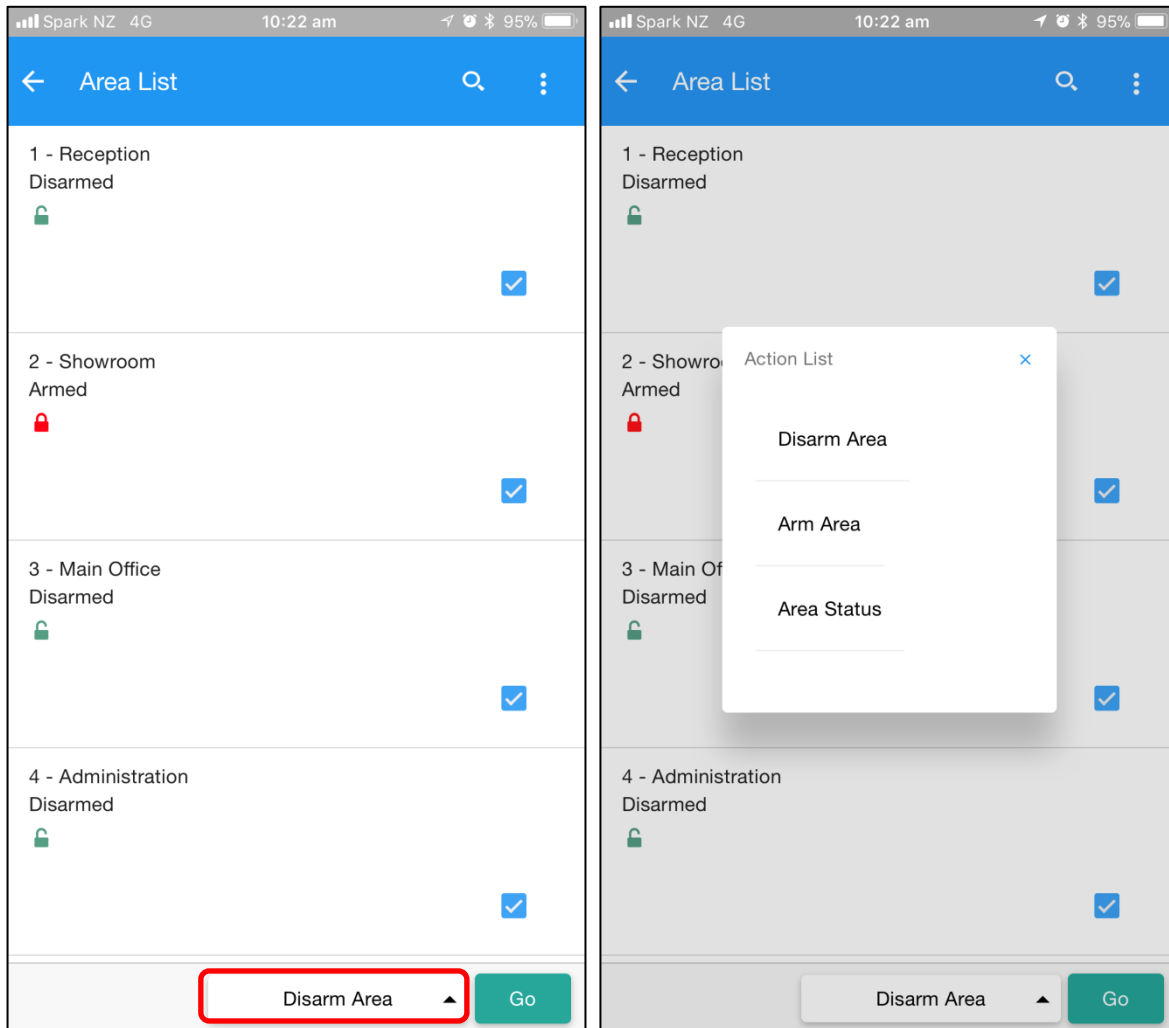

Once you've made your selection, the Areas will immediately update on the panel, and the Area list will display their current status.

You can also search for Areas by name by tapping on the magnifying glass icon in the top right corner, and typing the name you are looking for.

Results will immediately update with every character that you type.

